

 
Airtame

- [Airtame Troubleshooting](#)
- [Airtame - Share A Single Window](#)

Airtame Troubleshooting

Computer will not connect to Airtame

This occasionally happens when the airtame has been saved as a favorite and the IP address of the airtame has changed. If your computer will not connect to a saved favorite, try manually typing in the IP address shown at the bottom left of the projector screen. It will look something like this: 10.62.92.246.

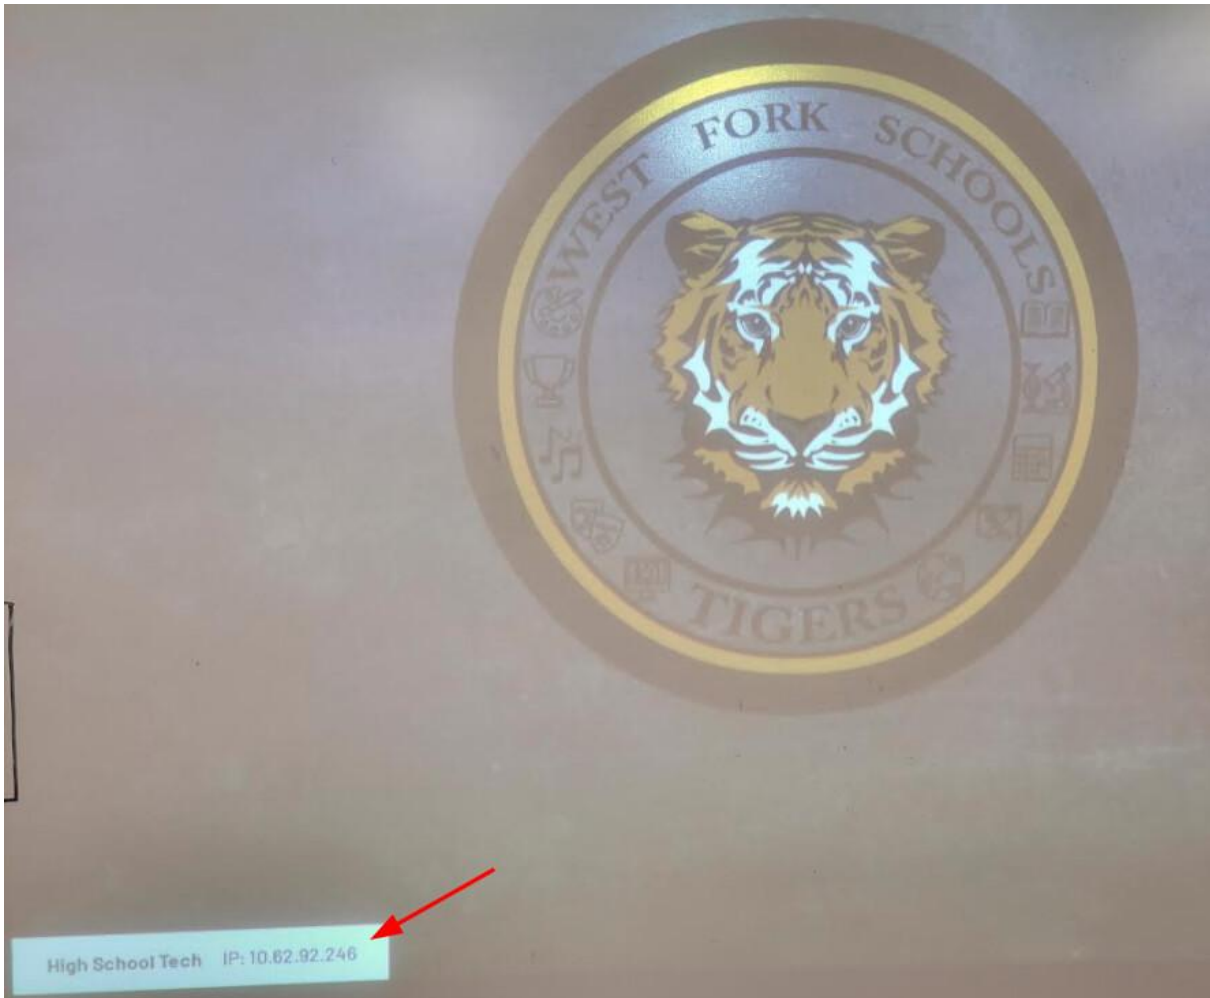

Airtame screen is not displaying on the projector

There are a couple of common possibilities.

Solution One: Make sure the projector input is set to HDMI.

Solution Two: If you can safely reach the airtame device; unplug the power cable, plug it back in, and allow the airtame to reboot.



Originally posted by Carl Clements on the West Fork Technology Hub (2022-12-20).

 
Airtame - Share A Single Window

Sometimes it is useful to present content using Airtame while using your computer screen for other tasks (entering grades, viewing notes, etc).

I'll quote Airtame on this feature to sum it up...

"This feature allows you to share a selected window or application while simultaneously working/viewing presentation notes and other content on your computer."

Up until now most of the teacher laptops had an outdated version of Airtame that only allowed sharing of the entire screen. You should be able to notice an additional button now for **[Share window]**,

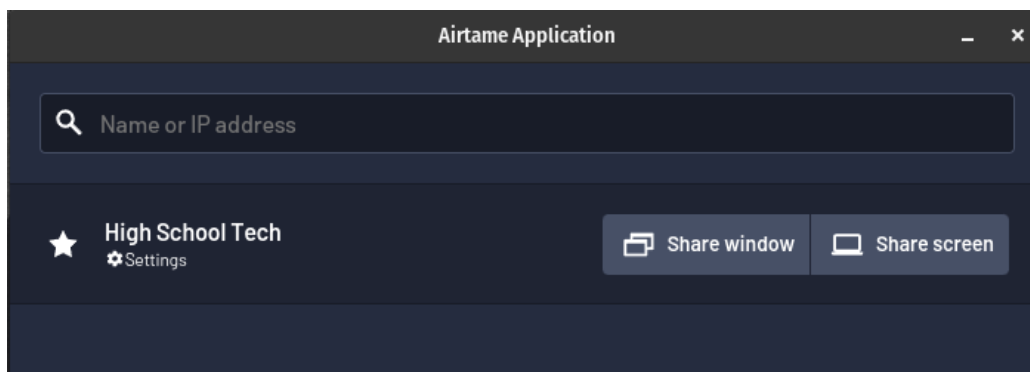

If you see this option, simply select the **[Share window]** button and select what you would like to have on the projector. If you aren't sure how to open a separate window then you can visit [this support article](#) for instructions. To repeat the same instructions here, you will press **[Ctrl] + [N]** or click and drag a tab off of the current Google Chrome window.

Originally posted by Stephen Hale on the West Fork Technology Hub (2024-01-30).