

Turning the trackpad on and off

Certain models of the student Windows devices have a function key that turns on/off the trackpad. This can be helpful if they are accidentally hitting the trackpad while trying to type. More often, it gets pressed by mistake and they think their device is damaged beyond repair.

Below are the keys for the affected grades and models as well as the key to toggle the trackpad on/off.

- **5th and 9th (Acer Models) F10**
image
- **7th and 8th (Lenovo Models) F6**
image

Revision #1

Created 2025-06-30 20:58:17 UTC by Dustin Faust

Updated 2025-06-30 20:58:44 UTC by Dustin Faust